

CODESYS and iR Overview

CODESYS and iR Remote IO Resources

2023/03/25



Table of Contents

1. Overview	1
2. Product Introduction	1
3. CODESYS	3
4. cMT X + CODESYS Product Features	4
cMT X HMI.....	4
1. Check and Update HMI OS.....	5
2. Activate CODESYS.....	5
3. Update CODESYS Firmware	5
5. cMT-CTRL01	6
6. iR Remote I/O	7
iR Series Product Features	7
iR Series.....	8
iR-COP	8
iR-ECAT.....	8
iR-ETN.....	8
iR Digital I/O	9
iR Analog I/O	9
iR Temperature	9
iR Motion Control	9
EasyRemoteIO.....	10
iR Modules Firmware Update Manual.....	10
7. Demo Project	11
8. Tutorial Videos.....	13
Appendix A CODESYS Libraries	15

Other company names, product names, or trademarks in this document are the trademarks or registered trademarks of their respective companies.

This document is subject to change without notice.

Copyright© 2023 WEINTEK IIOT LTD. All rights reserved.

1. Overview

 
This document integrates relevant information about cMT HMI CODESYS and iR Remote IO.

2. Product Introduction

Click a link in the table below to see relevant information.

Hardware	cMT X			cMT-CTRL01	
Soft PLC	CODESYS				
Fieldbus	EtherNet/IP	Modbus TCP/IP	CANopen	EtherCAT	iBus
Coupler	iR-ETN		iR-COP	iR-ECAT	
I/O Modules	iR I/O Modules				
	EasyRemote IO	Demo Project	Tutorials		

cMT X HMI and cMT-CTRL01 with built-in CODESYS are in compliance with IEC 61131-3 Programmable Logic Controller (PLC) standard. Combining cMT X HMI and cMT-CTRL01 with iR Series I/O Modules delivers a new generation solution that achieves a more compact and flexible architecture.

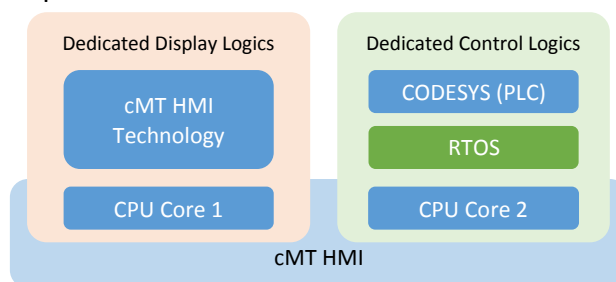

cMT X + CODESYS is a product that integrates high-performance cMT X Series HMI with CODESYS PLC controller system, which is built upon an innovative architecture where a multi-core CPU runs 2 independent operating systems. With the multi-core processor, cMT X + CODESYS is able to not only provide data visualization with an operable user interface but also runs controller logic. The two systems run independently without mutual interference. On the one hand, the HMI boasts delicate graphical UI and advanced integration features (direct database access, OPC UA, and MQTT); on the other hand, CODESYS controller system in compliance with


IEC61131-3 supports multiple languages such as FBD/LD/IL/ST/SFC/CFC, thus optimizing development flexibility.

cMT X + CODESYS utilizes a unique internal communication channel to allow the display unit to obtain control information from CODESYS very quickly, while at the same time aiding CODESYS controller system in connecting with other systems like database and 3rd party controllers. In addition, cMT X + CODESYS is equipped with dedicated Ethernet and CAN bus interfaces which allow for stable and highly efficient data transmission to satisfy diverse automation demands.

iR Series I/O module is a brand new series Weintek product. By using couplers that support different bus systems: CANopen, EtherCAT, EtherNet/IP, or MODBUS TCP/IP, this modularized system is compatible with most existing control systems. Patented fixture clip makes it easy to connect many I/O modules and effectively prevents modules from falling off due to shock. Flexible module assembly can avoid unnecessary nodes and reduce overall costs. Additionally, iR Series patented iBus technology is strong in noise resistance and efficient in communication that ensures correct and timely update of I/O status.

cMT X + CODESYS can be used with CANopen, EtherCAT, or MODBUS TCP/IP modules from other manufacturers.

 3. CODESYS

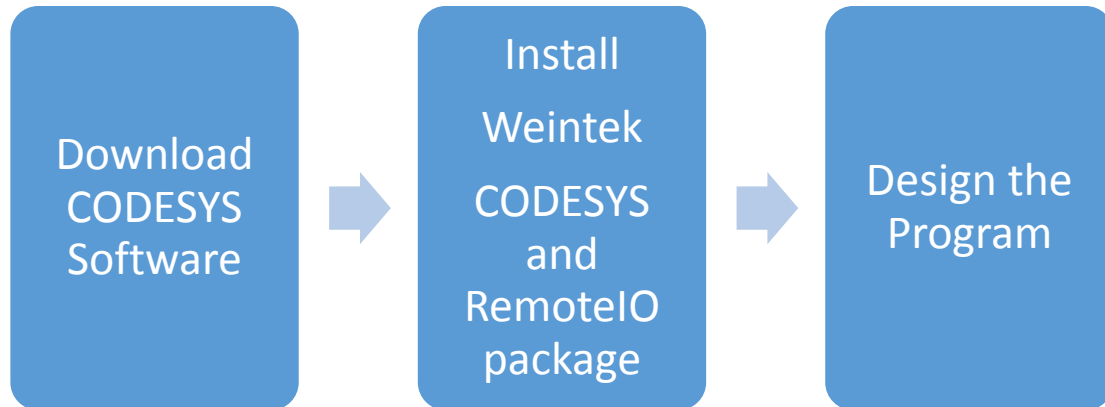

Please download CODESYS V3.5 SP10 Patch3 using the following link in CODESYS website:

<https://store.codesys.com/codesys.html#All%20versions>

- CODESYS V3 PLC Runtime (3.5.10) is the current version.
- CODESYS V2.3 is not compatible.
- CODESYS V3.5 SP10 Patch3 is recommended. When using a version later than V3.5 SP10 Patch3, please make sure that the Library used is 3.5.10.

After installing CODESYS, please also install:

Weintek_CODESYS_and_RemoteIO_package:

https://dl.weintek.com/public/cMT/CODESYS/Weintek_CODESYS_and_RemoteIO_package/Weintek_CODESYS_and_RemoteIO_1.4.0.435.package

This package includes:

- * Weintek-Cortex-embedded.devdesc.xml
- * iR-COP.devdesc.xml
- * Weintek iR-ECAT devdesc.xml
- * Weintek-library
 - * PID Function Block
 - * iR-PU01-P Motion Control Function Block

Double clicking on the file can start installation. If an earlier version is installed, please directly install the new version.

For more information about CODESYS version, see the following FAQ:

[FAQ_112_CODESYS_Version_eng.pdf](#)

4. cMT X + CODESYS Product Features

■ Reduced Complexity

No extra PLC hardware needed for cMT X + CODESYS.

■ Real-time Operating System

Innovative design makes two operating systems run independently. Built-in CODESYS operating system ensures that running controller logic will not be interrupted due to the complexity of the display side.

■ Dedicated Ethernet and CAN bus

CODESYS has full control of Ethernet (LAN1) and CAN bus. This ensures the real-time performance of control system.

■ High Performance

Bit operations take only 10 nanoseconds, meeting the demand for a medium-to-high level control system performance.

■ Fast Internal Communication

Dedicated data channel between the two systems allows the display unit to obtain data from control system very quickly and ensure efficient data exchange. CODESYS configuration and project management can be done from display side.

■ Inherits key features of cMT architecture

Supports rich picture libraries, over 300 protocols, MQTT, OPC UA client/server, and EasyAccess 2.0 remote access service.

cMT X HMI

cMT X HMI users can purchase a CODESYS activation card to activate CODESYS features. Users can find a CODESYS license sticker on the CODESYS activation card and put the sticker on the HMI.



cMT CODESYS Datasheet

[cMT CODESYS Datasheet ENG.pdf](#)



1. Check and Update HMI OS

To find out whether the HMI OS version supports CODESYS activation, open Web page or HMI’s System Setting. Please see [cMT CODESYS Datasheet ENG.pdf](#)

2. Activate CODESYS

Please refer to the manual:

[UM018005E Activate CODESYS Feature on cMT UserManual eng.pdf](#)

This manual walks through the activation steps for CODESYS features on cMT HMIs.

3. Update CODESYS Firmware

If CODESYS Firmware contained in the OS package is an earlier one, please upgrade it so that it can work with Weintek_CODESYS_and_RemoteIO_package.

Download: [codesys_20230204.670.bin](#)

How to upgrade the CODESYS firmware :

<http://www.evernote.com/l/ARInuCZt8N1A9LXAyy0E0jFCIZ-SXxjKT18/>

Documents	
User Manual	Weintek CODESYS Library User Manual UM018017E CODESYS Weintek Library UserManual eng.pdf


5. cMT-CTRL01



In compliance with IEC 61131-3 Programmable Logic Controller (PLC) standard, cMT-CTRL01’s built-in CODESYS supports multiple languages such as FBD/LD/IL/ST/SFC/CFC. Also, cMT-CTRL01 supports IIoT protocol standards: OPC UA and MQTT with which data from the connected devices can be uploaded to IIoT datacenter. Additionally, users can, with a license, activate EasyAccess 2.0 to update the device’s CODESYS project and monitor its operation status, thus reducing maintenance costs. With EasyAccess 2.0 push notification, users receive immediate notification about the operation errors on their portable devices for quick troubleshooting.

Documents	
Datasheet	cMT-CTRL01 Datasheet ENG.pdf
User Manual	UM019006E cMT-CTRL01 UserManual eng.pdf
Installation Instruction	GMECTR100 cMT-CTRL01 Installation.pdf
CE Certificate	CE Certificate cMT CTRL01.pdf
Files	
cMT-CTRL01 OS	cMT CTRL OS 20230308.zip
CODESYS runtime	Same as cMT HMI=> 3. Update CODESYS Firmware
iR Slave	iR Slave v1020 20201204.bin

 How to upgrade cMT-CTRL01: See cMT-CTRL01 User Manual Chapter 3 Updating Web Package and OS.

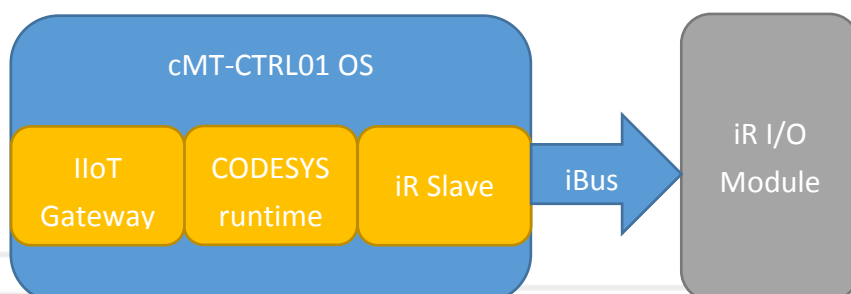

6. iR Remote I/O

iR Series Product Features

- **Modular Design**

Couplers can be paired with different combination of I/O modules and the number of nodes can be adjusted as required.

- **Compact Form Factor**

More number of I/O in a compact form factor, reducing the size of the system and minimizing the wiring complexity.

- **Supports EtherCAT, EtherNet/IP, CANopen and MODBUS (TCP/IP)**

Supports mature EtherCAT, EtherNet/IP, CANopen and MODBUS (TCP/IP), which facilitate integration with most control systems.

- **iBus Communication**

Thanks to the noise resistance and communication efficiency of iBus, update of I/O status can be done within milliseconds even if over 10 modules are used.

- **Plug-in I/O Installation**

Screw-less design expedites the installation and decreases the possibility of loose wire that happens in traditional screwing.

Find relevant information by clicking on a link in the table below.

iR Series													
Coupler	<table border="1"> <tr> <td>iR-ETN Modbus TCP/IP EtherNet/IP</td> <td>iR-ECAT EtherCAT</td> <td>iR-COP CANopen</td> </tr> </table>	iR-ETN Modbus TCP/IP EtherNet/IP	iR-ECAT EtherCAT	iR-COP CANopen									
iR-ETN Modbus TCP/IP EtherNet/IP	iR-ECAT EtherCAT	iR-COP CANopen											
Software	EasyRemote I/O												
Digital I/O	<table border="1"> <tr> <td>PNP</td> <td>NPN</td> </tr> <tr> <td colspan="2">iR-DI16-K</td> </tr> <tr> <td>iR-DM16-P</td> <td>iR-DM16-N</td> </tr> <tr> <td>iR-DQ16-P</td> <td>iR-DQ16-N</td> </tr> <tr> <td colspan="2">Relay Output</td> </tr> <tr> <td colspan="2">iR-DQ08-R</td> </tr> </table>	PNP	NPN	iR-DI16-K		iR-DM16-P	iR-DM16-N	iR-DQ16-P	iR-DQ16-N	Relay Output		iR-DQ08-R	
PNP	NPN												
iR-DI16-K													
iR-DM16-P	iR-DM16-N												
iR-DQ16-P	iR-DQ16-N												
Relay Output													
iR-DQ08-R													
Analog I/O	<table border="1"> <tr> <td>Analog Input</td> <td>Analog Output</td> </tr> <tr> <td>iR-AI04-VI</td> <td></td> </tr> <tr> <td colspan="2">iR-AM06-VI</td> </tr> </table>	Analog Input	Analog Output	iR-AI04-VI		iR-AM06-VI							
Analog Input	Analog Output												
iR-AI04-VI													
iR-AM06-VI													

	iR-AQ04-VI
Temperature	iR-AI04-TR
Motion Control	iR-PU01-P

iR Series

Documents	
Datasheet	iR Datasheet ENG.pdf
User Manual	cMT+CODESYS and Remote I/O Quick Start Guide UM018003E cMT Codesys Install UserManual eng.pdf

iR-COP

Documents and Files	
User Manual	iR-COP UserManual(English)
Installation	GMEIRCP00 iR-COP Installation.pdf
Instruction	
Certificate	iR-COP Certificate.pdf
iR-COP EDS	Download

iR-ECAT

Documents and Files	
User Manual	iR-ECAT User Manual(English)
Installation	GMERECT00 iR-ECAT Installation.pdf
Instruction	
Certificate	iR-ECAT Certificate.pdf
iR-ECAT ESI	iR-ECAT ESI 20230321

iR-ETN

Documents and Files	
User Manual	iR-ETN User Manual(English)
Connection Guide	iR-ETN EtherNetIP Connection Guide
Installation	GMERETN00 iR-ETN Installation.pdf
Instruction	
Certificate	iR-ETN Certificate.pdf

iR Digital I/O

Documents and Files	
Installation	GMERDXM00 iR-Dxxx Installation.pdf
Instruction	
Certificate	iR-COP Certificate.pdf Model : iR-COP, iR-DI16-K, iR-DM16-P, iR-DM16-N, iR-DQ16-P, iR-DQ16-N, iR-DQ8-R iR-ETN Certificate.pdf Model : iR-ETN, iR-DI16-K, iR-DM16-P, iR-DM16-N, iR-DQ16-P, iR-DQ16-N, iR-DQ8-R

iR Analog I/O

Documents and Files	
User Manual	iR-AI04-VI,iR-AM06-VI,iR-AQ04-VI User Manual(English)
Installation	GMERAXX00 iR-Axxx Installation.pdf
Instruction	
Certificate	iR-AM06-VI AI04-VI Certificate.pdf Model Name: iR-AI04-VI, iR-AM06-VI iR-AQ04-VI Certificate.pdf Model Name: iR-AQ04-VI

iR Temperature

Documents and Files	
User Manual	iR-AI04-TR User Manual(English)
Installation	GMERI4T00 iR-AI04-TR Installation.pdf
Instruction	
Certificate	iR-AI04-TR Certificate.pdf

iR Motion Control

Documents and Files	
User Manual	iR-PU01-P UserManual(English)
Installation	GMERU1P00 iR-PU01-P Installation.pdf
Instruction	
Certificate	iR-PU01-P Certificate.pdf

EasyRemotelO

EasyRemotelO is a tool for setting up Weintek iR-ETN. In EasyRemotelO, users can set iR-ETN's IP address, configure parameters, monitor or modify values.

Documents and Files	
Software	EasyRemotelO V1.4.7.0
User Manual	EasyRemotelO UserManual(English)


iR Modules Firmware Update Manual

[UM019005E iR Series Firmware Update UserManual eng.pdf](#)

IO Runtime Updater	IO_Runtime_Updater_V1.7.0.0.zip
iR-COP Version: 2.0.0.0	Support iR-PU01-P module
iR-ECAT iR-ECAT_v1 iR-ECAT_v2 iR-ECAT_v3	
iR-ETN V1.0.3.0 V2.0.0.1	Support EtherNet/IP
iR-ETN40R V1.0.1.0	
iR-PU01-P firmware V1.0.3.0	
iR-AM06-VI firmware V1.0.0.1	Bug fix-output channel 1 is closed, it will cause channel 2 not to output.

7. Demo Project

 
Demo Project

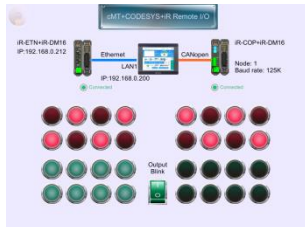

[DEM18002 iR-DM16, iR-COP, iR-ETN Demo](#)

This demo project demonstrates how to check connection status of CODESYS and iR.

 iR-COP iR-ETN iR-DM16



[DEM19001 iR Application Oven Demo](#)


Oven Temperature Control - FB PID Application

iR-ETN iR-DM16-P iR-AI04-TR

Line	Index/Subindex	Name	Value	Bit length
1	0x40000.0x0001	ADDA_I2_Pulse_1Pulse	1	16
2	0x40000.0x0002	ADDA_I2_Pulse_2Pulse	2	16
3	0x40000.0x0003	ADDA_I2_Pulse_3Pulse	3	16
4	0x40000.0x0004	ADDA_I2_Pulse_4Pulse	4	16
5	0x40000.0x0005	ADDA_I2_CoveringTime	5	16
6	0x40000.0x0006	ADDA_I2_CoveringTime	6	16
7	0x40000.0x0007	ADDA_I2_CoveringTime	7	16
8	0x40000.0x0008	ADDA_I2_CoveringTime	8	16
9	0x40000.0x0009	ADDA_I2_CoveringTime	9	16
10	0x40000.0x000A	ADDA_I2_CoveringTime	10	16
11	0x40000.0x000B	ADDA_I2_CoveringTime	11	16
12	0x40000.0x000C	ADDA_I2_CoveringTime	12	16
13	0x40000.0x000D	ADDA_I2_CoveringTime	13	16
14	0x40000.0x000E	ADDA_I2_CoveringTime	14	16

[DEM19002 iR Configuration iR-COP AI04-TR Demo](#)

 This demo project demonstrates how to add SDO and configure iR-AI04-TR in CODESYS.

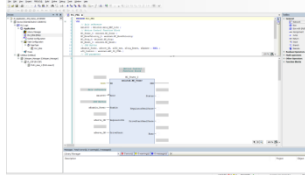

[DEM19004 iR Application JOG Demo](#)

This demo project demonstrates how to use Weintek Library Function Block and iR-PU01-P to perform velocity control by outputting pulse signals to servo/stepper motors.



 
[DEM19005 iR Application Positioning Demo](#)

This demo project demonstrates how to connect CODESYS with iR-COP via CANopen, in order to control iR-PU01-P to output pulse signals.




[DEM20005 EtherCAT Master Demo](#)

This demo project demonstrates how to use CODESYS EtherCAT Master to add iR Series modules.

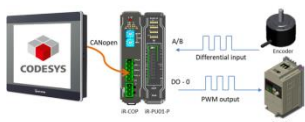

[DEM20006 iR Application PU PWM Inverter Demo](#)

 This demo project demonstrates how to develop a closed-loop control system. In this system, iR-PU01-P's DO-0 is used for PWM output to control the inverter to adjust the speed, and iR-PU01-P receives pulse input from the encoder.

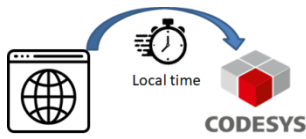



[DEM20007 CODESYS Library SysTimeRtc Demo](#)

This demo project demonstrates how to change HMI system time and read the new HMI system time by using CODESYS SysRtcTime Library.

Please visit Weintek’s official website to download the demo projects of CODESYS and iR Series modules:

<https://www.weintek.com/globalw/Download/Download.aspx>

8. Tutorial Videos

Documents and Files	
L29 – iR-ETN	https://forum.weintek.com/l29-ir-etn/ In this topic, you will learn: <ol style="list-style-type: none"> 1. What is iR-ETN? 2. Use EasyRemote IO to set iR-ETN parameter 3. EasyBuilder Pro Build-in driver support
L28 – iR-COP	https://forum.weintek.com/l28-ir-cop/ In this topic, you will learn: <ol style="list-style-type: none"> 1. Communication setting of iR-COP 2. Weintek Remote I/O (CANOpen) 3. PDO and SDO setting
YouTube Videos	https://www.youtube.com/user/WeintekCOM
Weintek Webinar 2019-03-06: Integrated Control Solution_HMI, Codesys & iR series feat 	https://youtu.be/fLIRC-yha3c During this webinar, you'll learn: <ul style="list-style-type: none"> • HMI with CODESYS • Remote I/O (iR Series): <ul style="list-style-type: none"> - Coupler - Digital I/O • Remote I/O (iR Series): <ul style="list-style-type: none"> - Analog I/O - Analog Temperature Input • Weintek Library (Codesys)
Weintek Webinar 2019-05-29: Weintek Control Solution – iR Basics & iR-ECAT 	https://youtu.be/navmyXmmxUM During this webinar, we will cover: <ul style="list-style-type: none"> • iR Basics - Wiring - Limit Calculation - Parameter/Data Access - Coupler Life Guarding • iR-ECAT Introduction
Weintek Webinar 2019-11-15: Motion	https://youtu.be/X_gkmPihYJE During this webinar, you will learn:

 
Control Solution
iR-PU01-P




Tutorial Video
Weintek Remote I/O
Solutions -
EASYREMOTEO




Tutorial Video

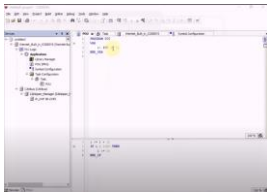

Tutorial Video

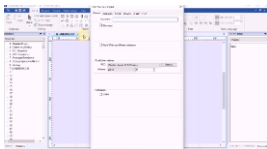 

Tutorial Video

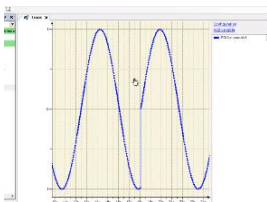 

- Weintek’s motion control solution
- iR-PU01-P:
 - Specification
 - Wiring
 - Parameter
 - CODESYS motion control

<https://youtu.be/Gu10v4msH1Q>

<https://youtu.be/uvjEj-3jpeU>

Demo 1: Add module in CODESYS

How to add a module in CODESYS (which in turn imports into EBPro for control)

<https://youtu.be/67vsUhchopM>

Demo 2: Directly Control by cMT3090 w/o PLC

A demonstration of direct control through a cMT without a PLC

<https://youtu.be/uNSyJRrxPc>

Demo 4: Trace

A demonstration of the trace function within CODESYS

Appendix A CODESYS Libraries

The libraries in the table below require OS support. Libraries that do not require OS support can be used directly; e.g. OSCAT Basic, Util library...etc.

Sys Library	Cmp Library	CAA Library
SysTimeRtc	CmpTraceMgr	CAAType
SysTimer	CmpSrv	CAATick
SysTime	CmpSettings	CAATickUtil
SysTask	CmpSchedule	CAASStorage
SysTarget	CmpRouter	
SysSocket	CmpPlcShell	
SysMem	CmpLog	
SysFile	CmpIoMgr	
SysExcept	CmpIoDrvC	
SysEvent	CmpIecVarAccess	
SysEthernet	CmpIecTask	
SysDir	CmpEventManager	
SysCpuHandling	CmpDynamicText	
SysCom	CmpChecksum	
	CmpChannelServer	
	CmpBinTagUtilIec	
	CmpAsyncMgr	
	CmpAppBP	

Please note that after adding a library that requires OS support but is not in the list, an unparseable message may be displayed during login.

Example:

A CAA File contains multiple libraries, and among these libraries, only CAA Tick, CAA TickUtil, and CAA Types are supported. In this case, CAA File library cannot be used.

